

## 799 Edgemont Door Kit

Use with Valor 780 and 785 Models only

### Installation Instructions

DANGER

**HOT GLASS WILL  
CAUSE BURNS.**

**DO NOT TOUCH GLASS  
UNTIL COOLED.**

**NEVER ALLOW CHILDREN  
TO TOUCH GLASS.**

**A barrier designed to reduce the risk of burns from the hot viewing glass is provided with this appliance and shall be installed for the protection of children and other at-risk individuals.**

INSTALLER

Leave this manual  
with the appliance.



CONSUMER

Retain this manual  
for future reference.

The 799 Edgemont Door Kit is intended to be used on Valor heater model 780 & 785.


**Mounting of the 799 affects cavity dimensions**—see below and installation manual supplied with the heater for more information.

#### Minimum Cavity Dimensions for 799

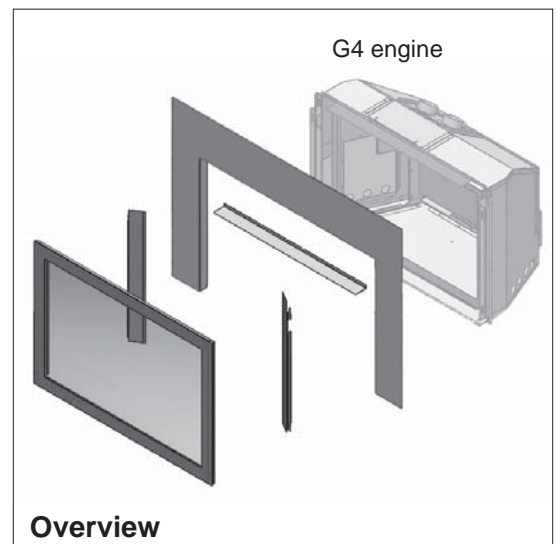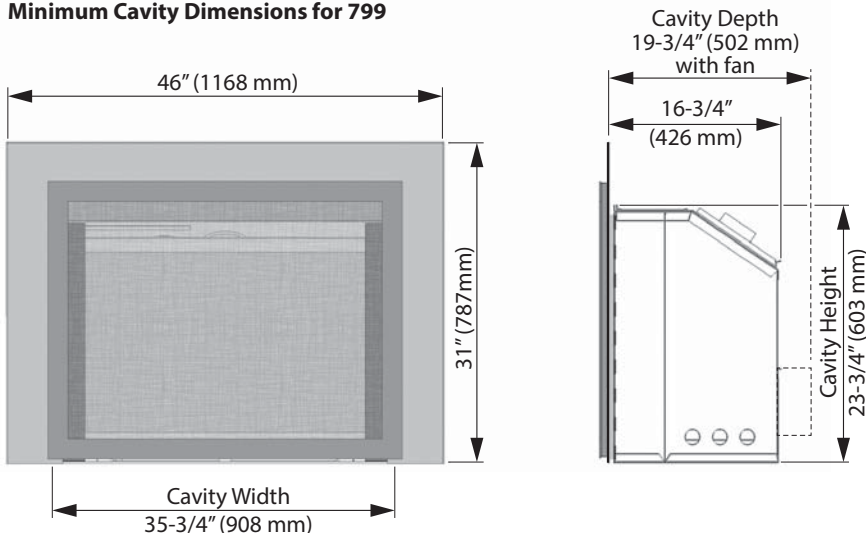


## Installation

1. Back off both vent slide fixing screws, locate convection baffle under screw heads and tighten into place.

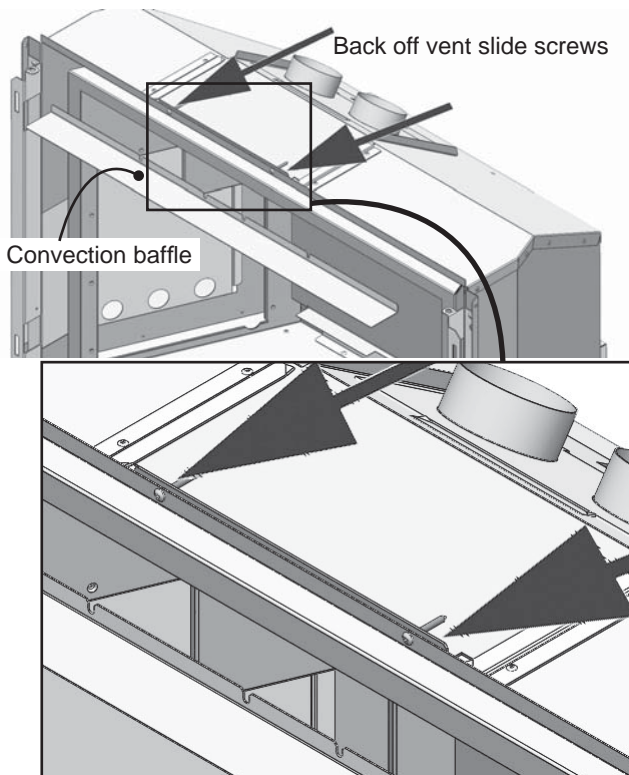


2. Secure the backing plate to the appliance's outer case from the inside as indicated (2 screws per side).  
Note: you may need to remove the side shrouds to fix the plate.

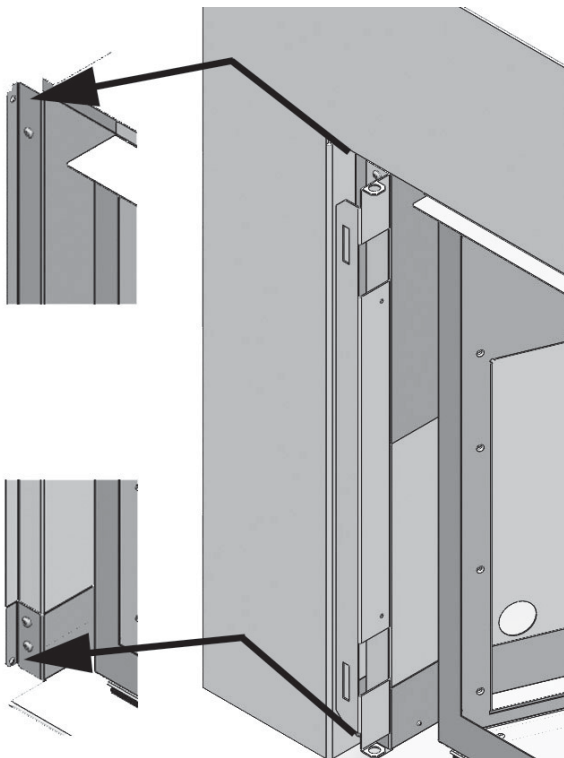


3. Identify the left and right door panels using the image below.
4. Identify the top and bottom of the left panel. The notch in the rear flange of the panel is at the top. The space between the rear flange and the edge of the panel is wider at the top than at the bottom of the panel as shown below.

### Left door panel

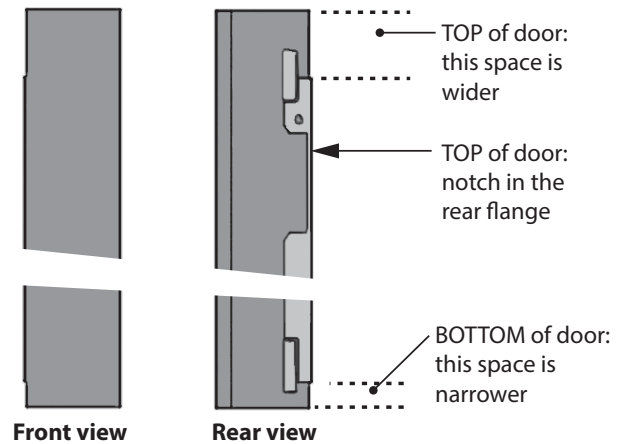


5. Insert the top pin of the left door panel in the hole at the top of the left shroud already installed on the appliance.
6. Lift the panel as far as possible and insert the bottom pin in the hole at the bottom of the shroud. The panel should rotate freely.

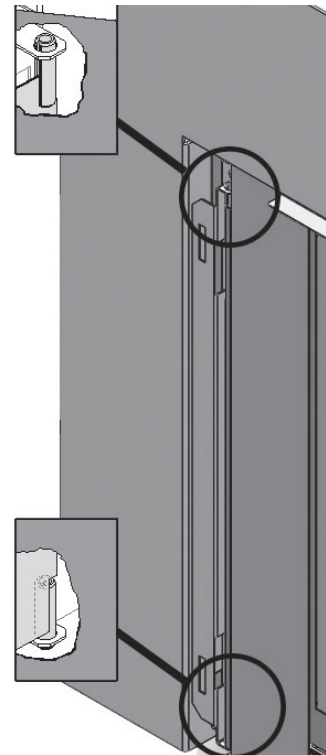

7. Install the right door panel the same way.

8. Hook the barrier screen door to the backing plate as indicated.

**Note:** The barrier screen door, when hooked to the backing plate, protrudes slightly in front of the plate.

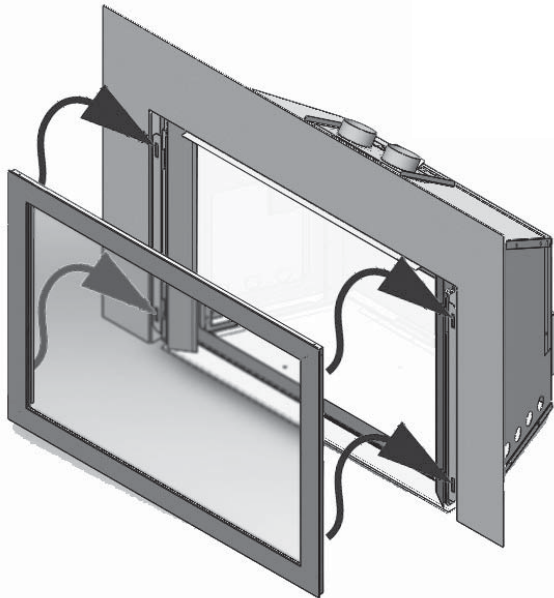

## Maintenance

### **! WARNING**

**DO NOT TOUCH THE BARRIER SCREEN DOOR OR FIREPLACE WHILE THEY ARE HOT!** Let the fireplace cool first before cleaning it.

**FOR SAFETY PURPOSE, ensure the barrier screen door is re-installed on the fireplace after maintenance if it has been removed.**


To clean the backing plate, use mild soap and water. You can dust the screen with a soft brush. To brush the back of the screen, simply unhook it.

To clean the window and ceramics inside the firebox, consult the *Owner's Information* section of the *Installation and Owner's Manual* supplied with the fireplace.

**DO NOT CLEAN THE GLASS WINDOW WITH AMMONIA!**

## Repair Parts List

	Description	Part Numbers	
		799EDZ Bronze	799EDN Nickel
1	Backing plate	4004444AZ	4004444AZ
2	Convection baffle	4004572BY	4004572BY
3	LH door panel	400248AZ	4002408AZ
4	RH door panel	4002410AZ	4002410AZ
5	Barrier screen door	4004340Z	4004340N

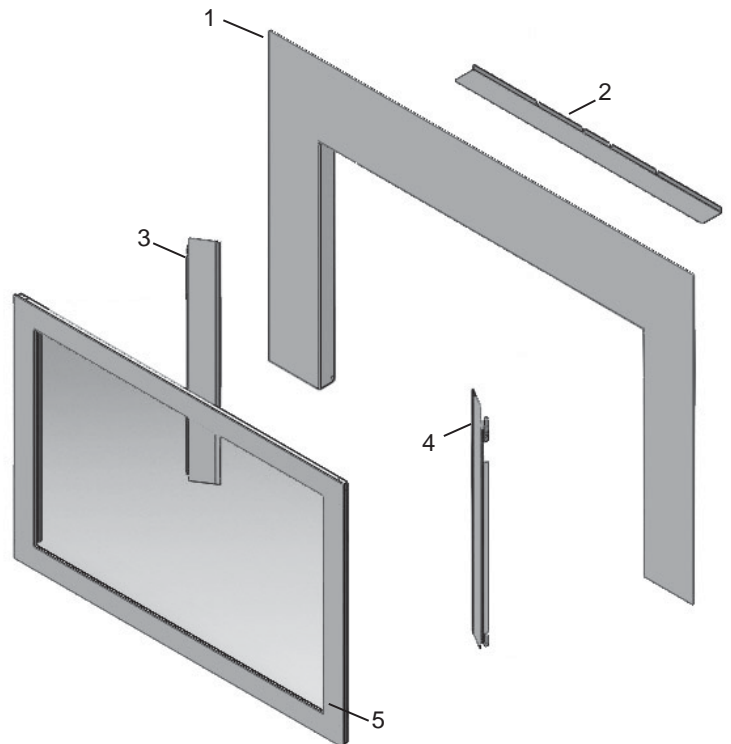

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication.

Designed and Manufactured by / for

**Miles Industries Ltd.**

190 – 2255 Dollarton Highway, North Vancouver, B.C., CANADA V7H 3B1

Tel. 604-984-3496 Fax 604-984-0246

[www.valorfireplaces.com](http://www.valorfireplaces.com)

## Porte Edgemont 799

Utilisez avec les foyers Valor Legend G4 780 et 785 seulement

### Directives d'installation



# DANGER



**VITRE CHAUDE - RISQUE DE BRÛLURES.**

**NE TOUCHEZ PAS UNE VITRE NON REFROIDIE.**

**NE LAISSEZ JAMAIS UN ENFANT TOUCHER LA VITRE.**

L'écran pare-étincelles fourni avec ce foyer réduit le risque de brûlure en cas de contact accidentel avec la vitre chaude et doit être installé pour la protection des enfants et des personnes à risques.



**INSTALLATEUR**  
Laissez cette notice avec l'appareil

**CONSOMMATEUR**  
Conservez cette notice pour consultation ultérieure

La Porte Edgemont 799 est conçue pour les foyers Valor Legend G4 modèles 780 et 785.


L'installation de la Porte 799 affecte les dimensions de la cavité—voir les détails ci-dessous de même que le guide d'installation fournie avec le foyer.

#### Dimensions minimales de cavité pour le 799

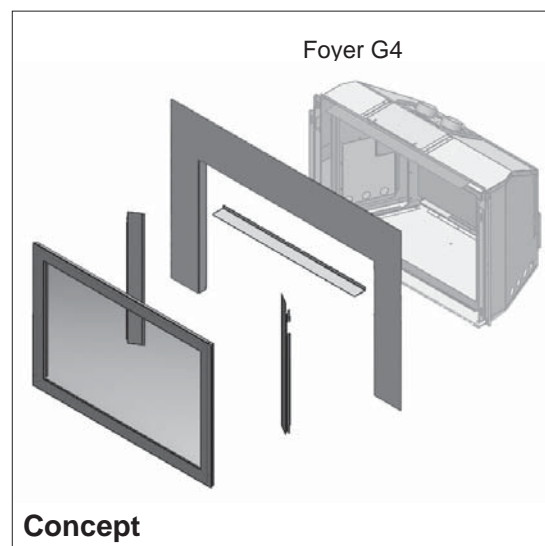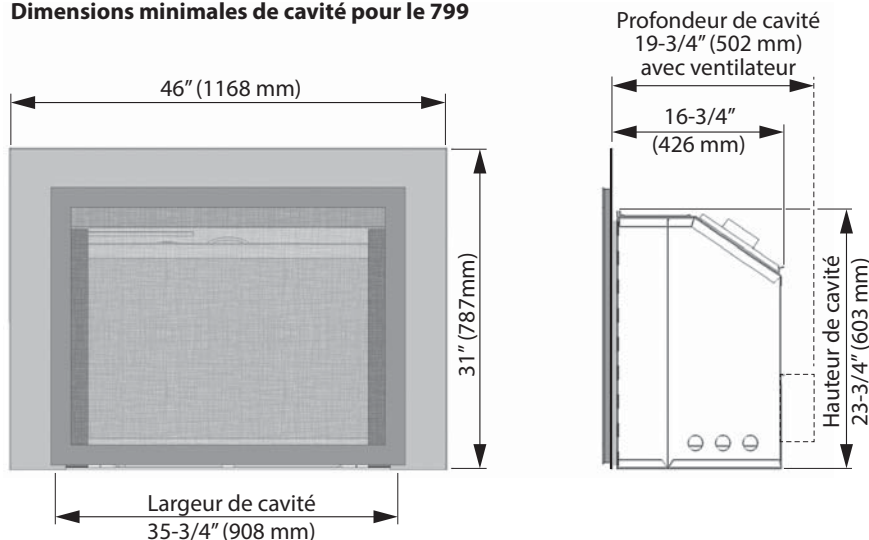

## Installation

1. Dévissez les deux vis de la plaque d'évent, placez le déflecteur de convection sous les têtes de vis et resserez les vis.

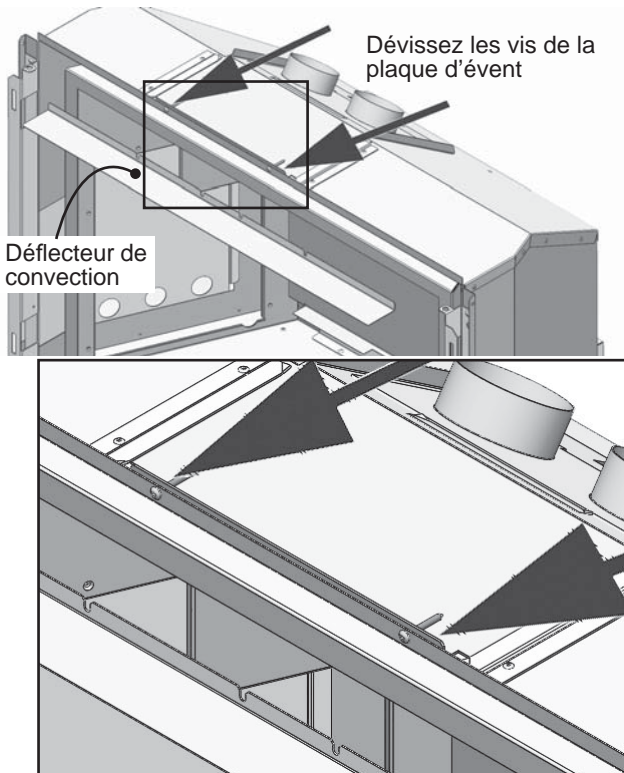


2. Fixez la plaque de finition aux supports des côtés déjà installés sur le foyer (2 vis par côté).  
**Note :** Utilisez les trous supérieurs des montants de la plaque de finition pour la fixer.




3. Identifiez les panneaux d'accès gauche et droite à l'aide de l'image ci-dessous.
4. Identifiez le haut et le bas du panneau de gauche. L'encoche du rebord à l'arrière est en haut. L'espace entre le rebord à l'arrière et le haut du panneau est plus large en haut qu'en bas.

### Panneau d'accès gauche

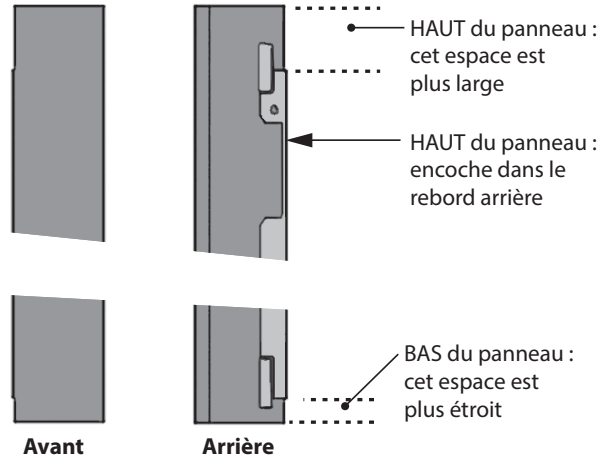


5. Insérez la cheville du haut dans le trou du support de devanture déjà installé sur l'appareil.
6. Soulevez le panneau et insérez la cheville du bas dans le trou du support. Le panneau devrait pivoter librement.

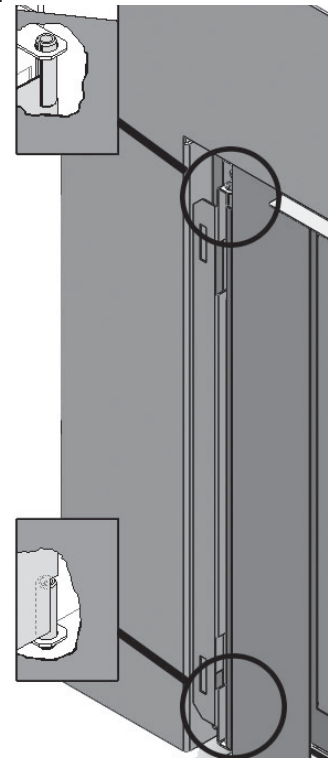

7. Installez le panneau droit de la même façon.

8. Accrochez l'écran pare-étincelles à la plaque de finition tel qu'indiqué.

**Note :** Lorsqu'installé, le pare-étincelles dépasse légèrement le devant de la plaque de finition.

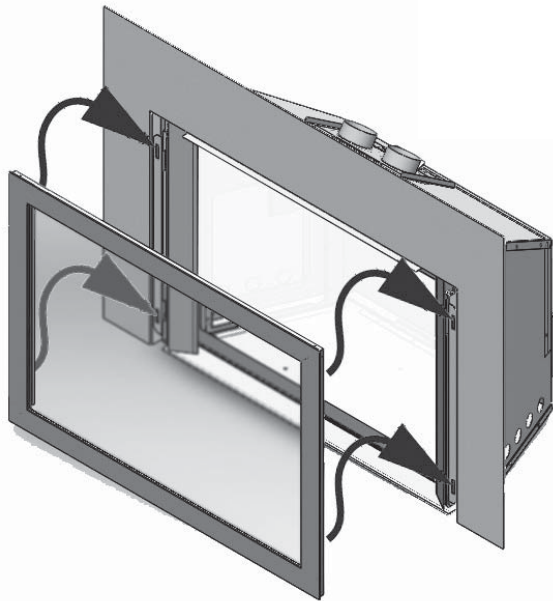

## Entretien

### **⚠ AVERTISSEMENT**

**NE TOUCHEZ PAS L'ÉCRAN PARE-ÉTINCELLES OU LE FOYER LORSQU'ILS SONT CHAUDS!**

Laissez le foyer refroidir avant de le nettoyer.

**POUR DES RAISONS DE SÉCURITÉ, assurez-vous que l'écran pare-étincelles est réinstallé sur le foyer après l'entretien s'il a été enlevé.**


Pour nettoyer la plaque de finition, utilisez une solution d'eau et de savon doux. Époussetez la grille à l'aide d'une brosse à poils doux. Pour brossez l'arrière de la grille, simplement décrochez-la porte.

Pour nettoyer la fenêtre et l'intérieur de la boîte de foyer, consultez la section *Information à l'intention du consommateur* dans le *Guide de l'installation et du consommateur* fourni avec le foyer.

**NE NETTOYEZ PAS LA VITRE DE LA FENÊTRE AVEC UN PRODUIT À BASE D'AMMONIAQUE!**

## Liste de pièces

	Description	N° de pièces	
		799EDZ Bronze	799EDN Nickel
1	Plaque de finition	4004444AZ	4004444AZ
2	Défecteur de convection	4004572BY	4004572BY
3	Panneau d'accès gauche	4002408AZ	4002408AZ
4	Panneau d'accès droite	4002410AZ	4002410AZ
5	Écran pare-étincelles	4004340Z	4004340N

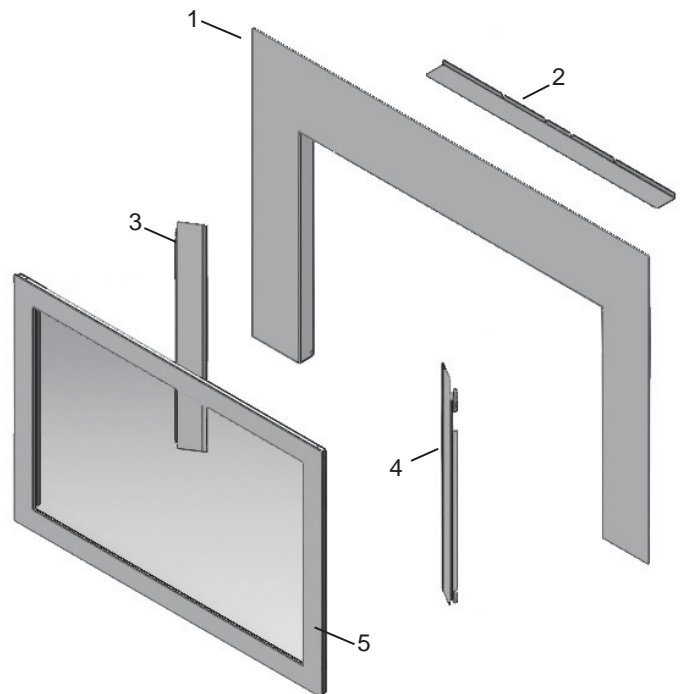

Parce que nous favorisons une politique de développement continu, certains détails de la présente publication peuvent varier.

Conçue et fabriquée par / pour

**Miles Industries Ltd.**

190 – 2255 Dollarton Highway, North Vancouver, BC, CANADA V7H 3B1

Tél. 604-984-3496 Téléc. 604-984-0246

[www.foyervalor.com](http://www.foyervalor.com)