




Radiant Gas Fireplaces



1205DSK Draw Screen Kit INSTALLATION INSTRUCTIONS


To be used **only** with Valor Model 1200 Heater

The 1205DSK Draw Screen Kit can be fitted on the 1200 engine at the original installation or afterwards.

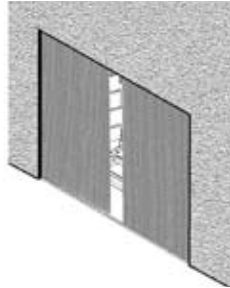


Installation

1. To allow room for a screwdriver, remove the window skirt, the side panels and the window.
2. There are 3 brackets to be assembled to the inside top of the firebox, in front of the window. The firebox panel (heat deflector) to which these brackets are to be fixed is already perforated for convenience. Fit the 3 brackets with 2 sheet metal screws each as indicated. Note that the end brackets are different, one goes to the right hand side and the other the left hand side. The hook should be away from the center.

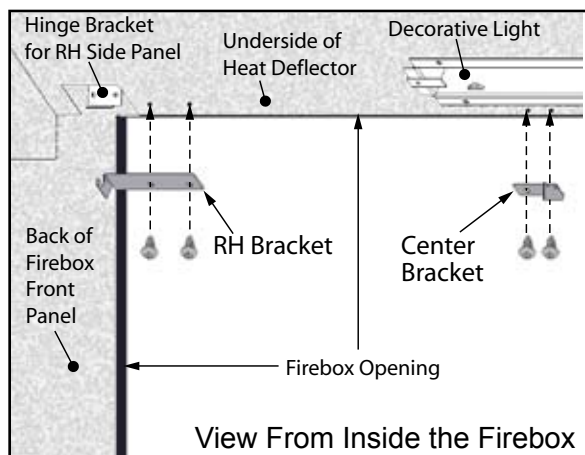


3. Refit the window. **Before operating the fireplace, follow the instructions in the Owner's Manual provided with the fireplace to insure that the window is secure.** Refit the window skirt and the side panels.



4. Thread the rod through the mesh panels. The handle on the panels should be in the center.

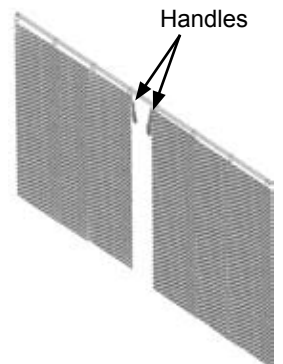

5. With pliers, open the last ring away from the center of the mesh panel and slide it into the hole at the end of the rod as indicated. Close the ring.

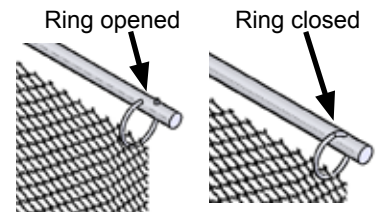

6. Hook the rod and mesh panels assembly on the brackets inside the firebox. The last ring on each end of the rod should be on the outside of the bracket as indicated in the Detail—Section View below. This will maintain the screen when it is pulled closed.

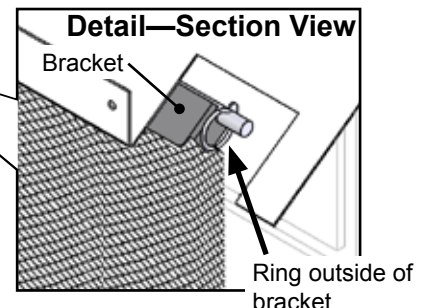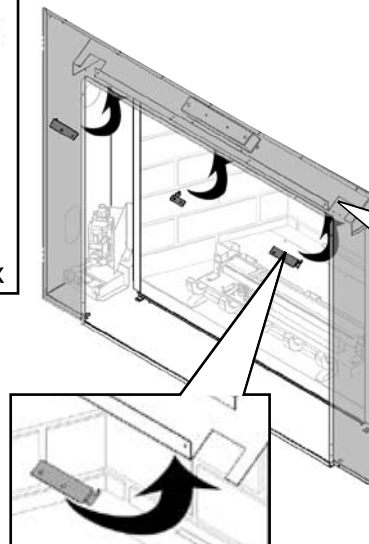


1205DSK Pare-étincelles amovible

DIRECTIVES D'INSTALLATION


Pour utilisation exclusive avec le foyer Valor 1200

Le Pare-étincelles amovible 1205SDK peut être installé en même temps que le foyer 1200 ou après.

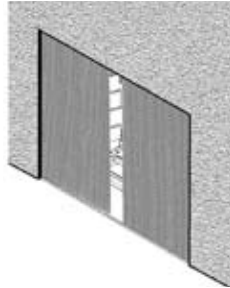


Installation

1. Afin de permettre l'espace nécessaire pour un tournevis, enlevez la plinthe de la fenêtre, les panneaux d'accès de chaque côté et la fenêtre.
2. Il y a 3 supports devant être montés à l'intérieur de la boîte de foyer, en haut, devant la fenêtre. Le panneau de métal (déflecteur de chaleur) sur lequel les supports doivent être fixés a été perforé pour faciliter l'installation. Fixez les 3 supports à l'aide de 2 vis à métaux chacun tel qu'indiqué. Prenez note que les supports des 2 bouts sont différents : l'un pour le côté gauche et l'autre pour le côté droit. Le crochet sur lequel sera posée la tringle doit être situé au bout plutôt que vers le centre.

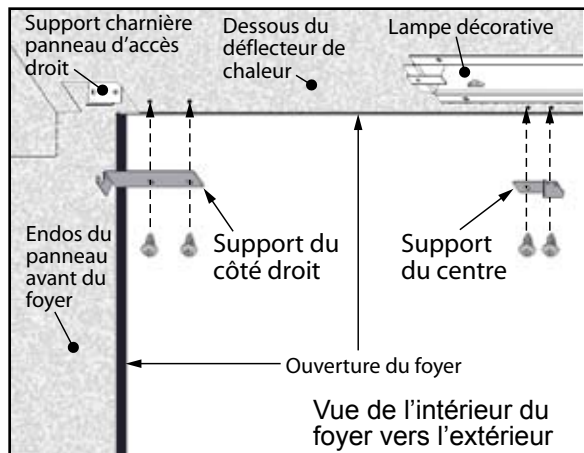


3. Réinstallez la fenêtre. **Avant de faire fonctionner le foyer, suivez les instructions de réinstallation de la fenêtre dans le Guide d'installation fourni avec le foyer et assurez-vous que la fenêtre est sécuritaire.** Réinstallez la plinthe de la fenêtre et les panneaux d'accès.


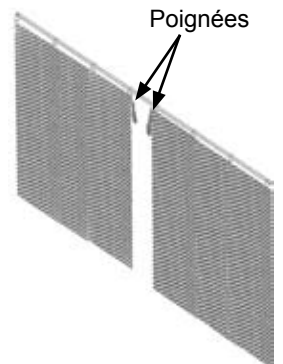


4. Enfilez les anneaux des panneaux du pare-étincelles sur la tringle. Les poignées devraient être au centre.

5. À l'aide de pinces, ouvrez le dernier anneau de chaque panneau et insérez-le dans le trou à l'embout de la tringle. Fermez l'anneau.

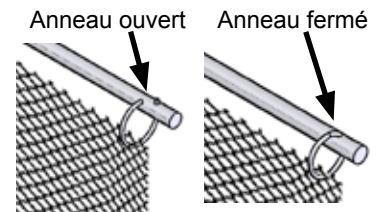


6. Accrochez la tringle avec les panneaux dans la boîte de foyer. Le dernier anneau de chaque côté devrait être placé à l'extérieur du crochet tel qu'indiqué au schéma ci-dessous. Ceci permettra de maintenir le panneau en place lorsqu'il sera fermé.

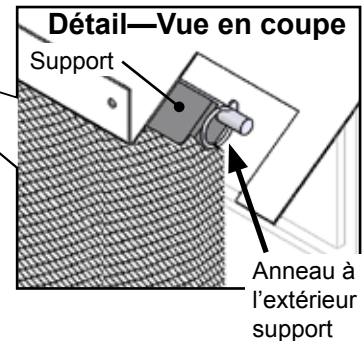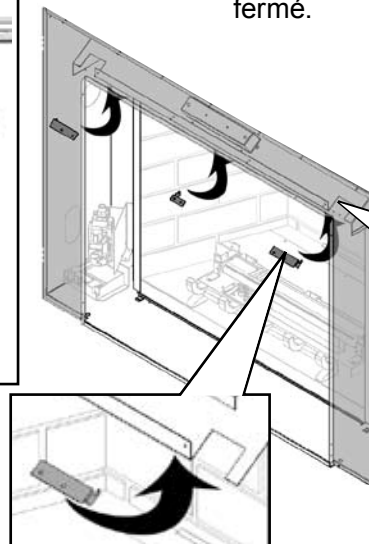

Repair Parts List / Liste de pièces

1	4001484	LH Bracket	Support gauche
2	4001485	RH Bracket	Support droit
3	4001467	Center Bracket	Support central
4	4001468	Rod	Tringle
5	4001469	Screen (2)	Panneaux pare-étincelles

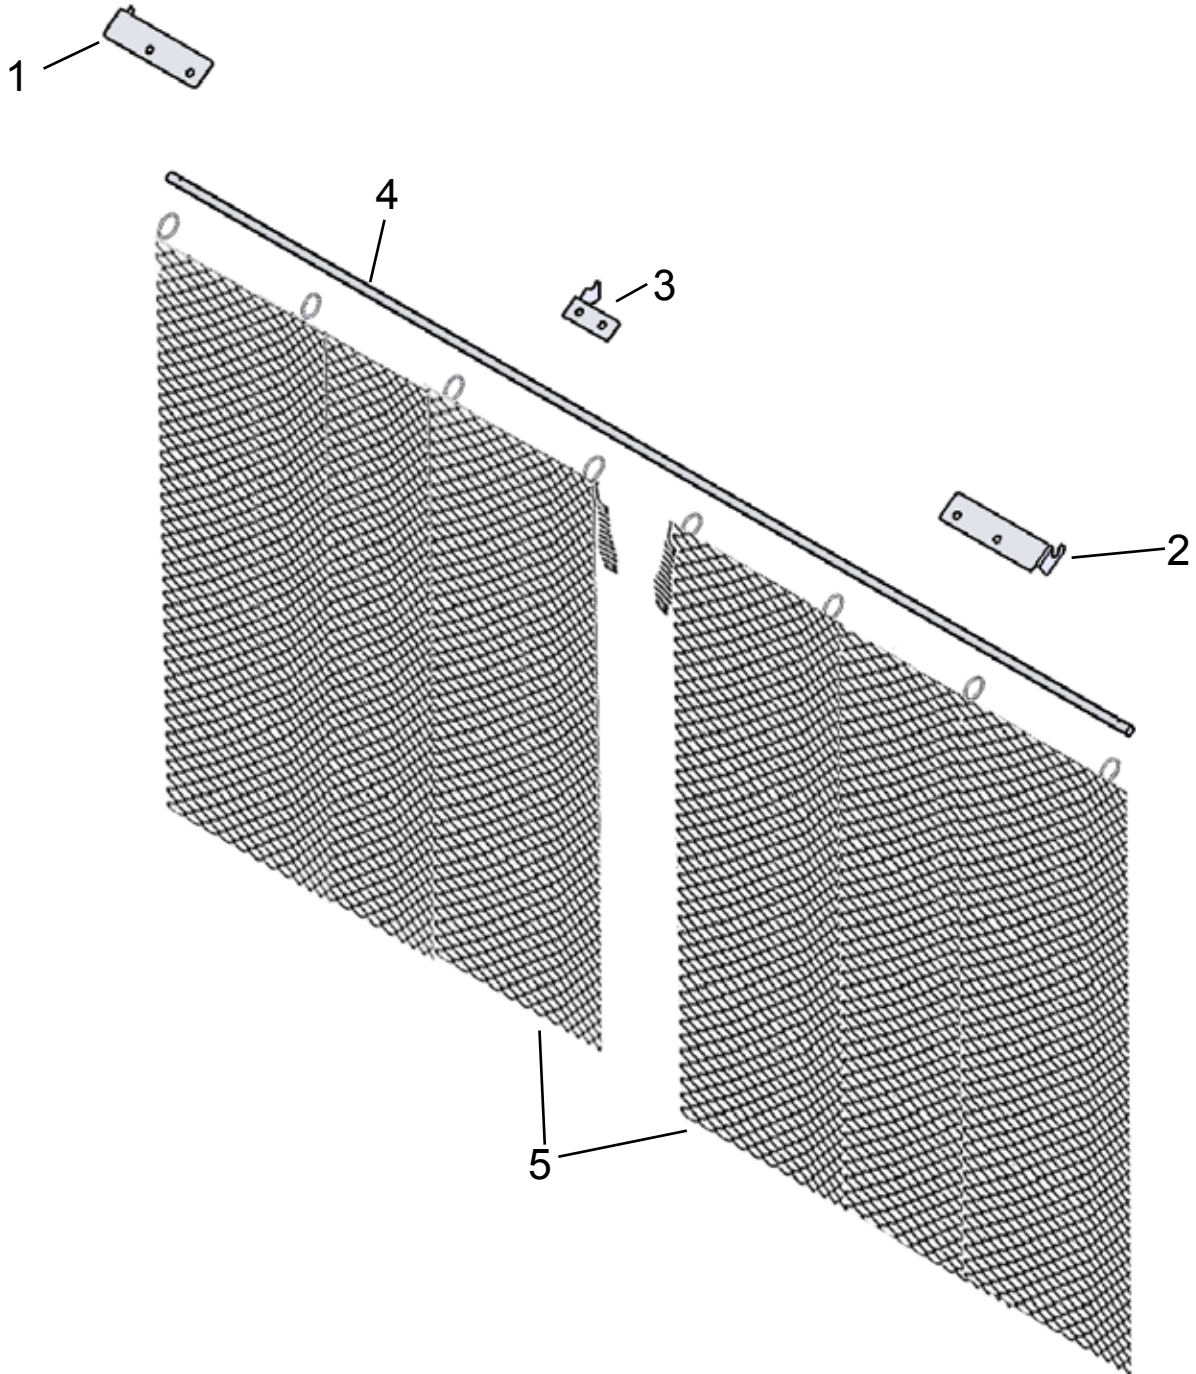

Designed and Manufactured by / Conçu et fabriqué par
Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver, BC, CANADA V7H 3B1

Tel. (604) 984-3496 Fax (604) 984-0246

www.milesfireplaces.com

© Copyright Miles Industries Ltd., 2007. Tous droits réservés.