




Radiant Gas Fireplaces

614CVI Arched Cast Surround


for 534/535 Heaters fitted with 610FVI, 611FVI or 612DKA Doors

for 1200 Heaters fitted with 1210DKA, 1215FDV, 1220FSV Doors or 1240BPK Plate


The 614CVI Arched Cast Surround is intended to be used on Valor model 534/535 or 1200 heaters fitted with FenderFire Double Doors, FenderFire Single Door, Alhambra Doors or the 3-Sided Backing Plates (1200 only). Installation of the 614CVI does not affect clearances, framing dimensions, or other specifications listed in the heater installation manual—see installation manual supplied with the heater. **Note: Backing or wall anchors may be required behind wall finish at fixing points to secure cast surround to wall.**

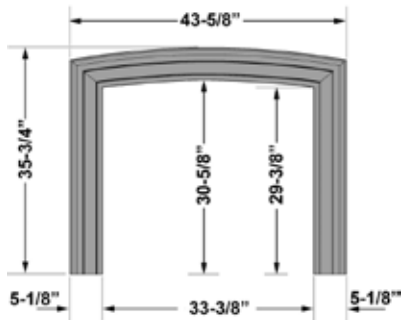


614CVI Arched Cast Surround

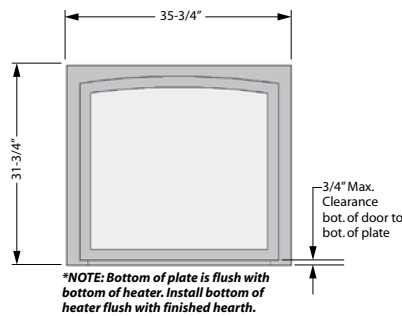


Door (sold separately)

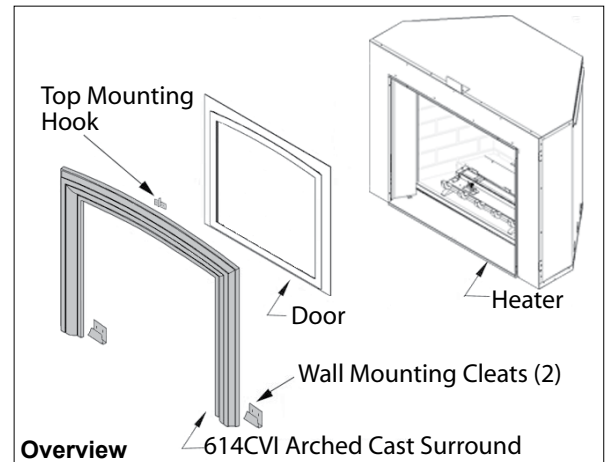

Overview

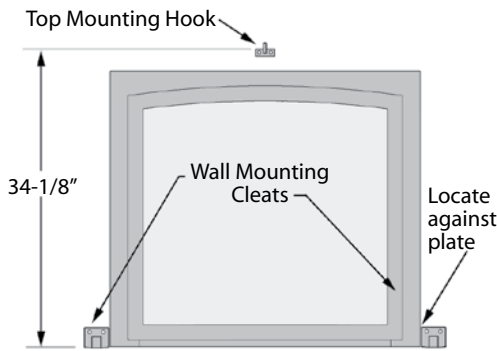

Location

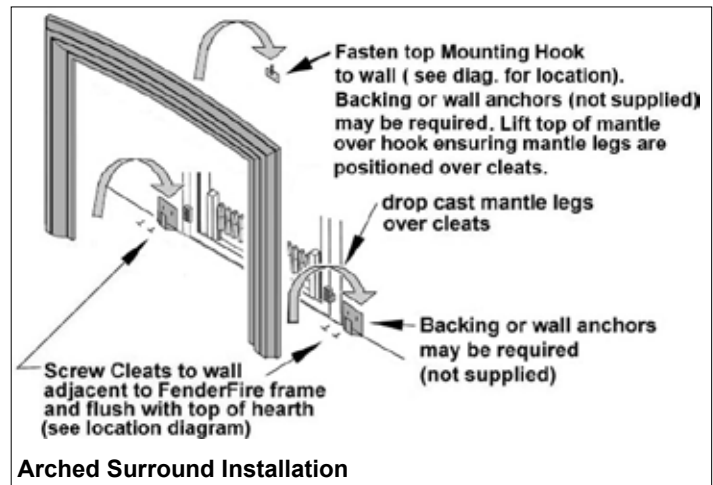

Arched Surround Installation

Installation

1. Install heater as per installation instructions. Allow for height of finished hearth.
2. Install the Door kit or backing plate following instructions packed with each kit.
3. Fix 2 mounting cleats (supplied) to the wall, flush with top of finished hearth and adjacent to the backing plate (use self-drilling screws for mounting to 1200 heater) as indicated above.
4. Fix the Top Mounting Hook to the wall above the backing plate (use self-drilling screws for mounting to 1200 heater) as indicated above.
5. Align and slide surround legs onto cleats and hook the surround to the top hook against the wall as indicated above.

Designed and Manufactured by Miles Industries Ltd.
North Vancouver, BC, Canada
www.milesfireplaces.com

© Copyright Miles Industries Ltd., 2007



Radiant Gas Fireplaces




Arche de fonte 614CVI


pour les foyers 534/535 installés avec les portes 610FVI, 611FVI ou 612DKA

pour les foyers 1200 installés avec les portes 1210DKA, 1215FDV, 1220FSV ou la plaque 1240BPK


L'arche de fonte 614CVI est conçue pour être installée avec les foyer Valor 534, 535 ou 1200 munis des portes FenderFire Simple ou Double, des portes Alhambra ou de la plaque à 3 côtés (1200 seulement). L'installation de l'arche de fonte 614CVI n'est pas affectée par les dégagements, dimensions d'encadrement ou autres particularités indiquées dans le guide d'installation du foyer—voir le guide fourni avec le foyer. **Note : Des chevilles d'ancrage murales peuvent être nécessaires pour soutenir l'arche de fonte à ses points de fixation au mur.**

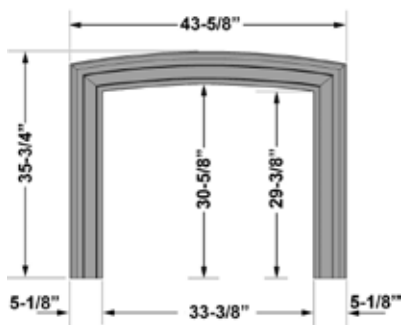

Arche de fonte 614CVI

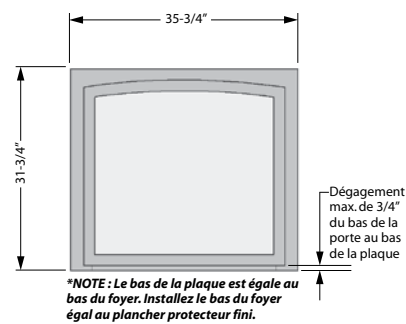

Porte (vendue séparément)

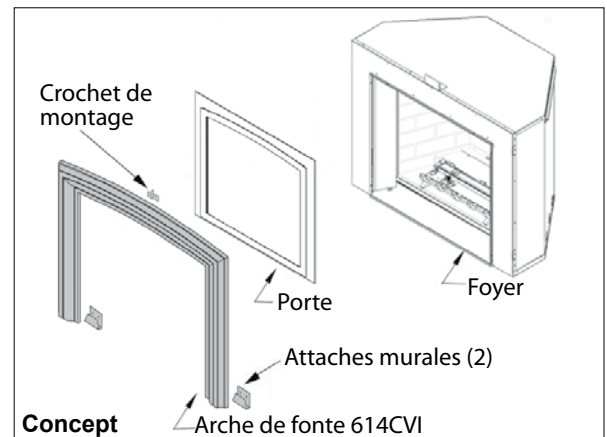

Concept


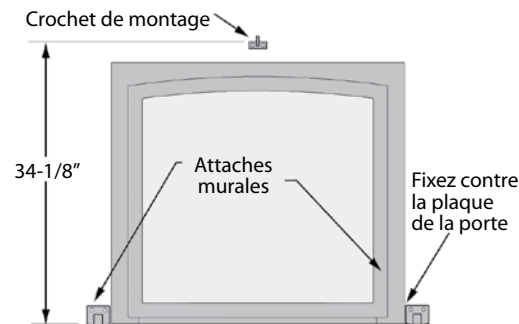


Schéma de positionnement

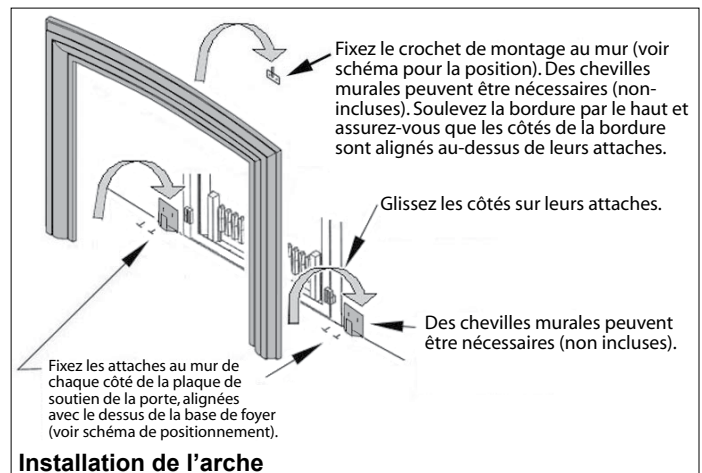

Installation de l'arche

Installation

1. Installez le foyer selon son guide d'installation. N'oubliez pas de laisser assez d'espace pour la base de foyer.
2. Installez les portes ou la plaque de soutien selon les directives fournies avec ces kits.
3. Fixez les deux attaches de base au mur immédiatement de chaque côté de la plaque de soutien des portes, égales au dessus de la base de foyer tel qu'indiqué ci-dessus. Utilisez des vis auto-perçantes pour le foyer 1200.
4. Fixez le crochet de montage au-dessus de la plaque de soutien. Utilisez des vis auto-perçantes pour le foyer 1200.
5. Alignez les pattes de la bordure aux attaches de base et glissez la bordure sur ces attaches tout en l'accrochant sur le crochet de montage, tel qu'indiqué ci-dessus.

Conçue et fabriquée par Miles Industries Ltd.
North Vancouver, C.-B., Canada
www.milesfireplaces.com
© Copyright Miles Industries Ltd., 2007