



Ventana Three-Sided Trims

INSTALLATION INSTRUCTIONS


To be used **only** with **Valor Model 1200 Heater**

Note: These trims must be installed by a qualified installer, service agency or gas supplier. These instructions are to be used in conjunction with the main installation instructions for the 1200.

NOTE: To install the Ventana three-sided trims, the *surface* of the finished hearth or floor must be at the same level as the bottom of the heater. Please be aware that the trims mounting *can ONLY accommodate up to 1/2" wall thickness of non-combustible material over the top of the concrete board supplied with the fireplace.*

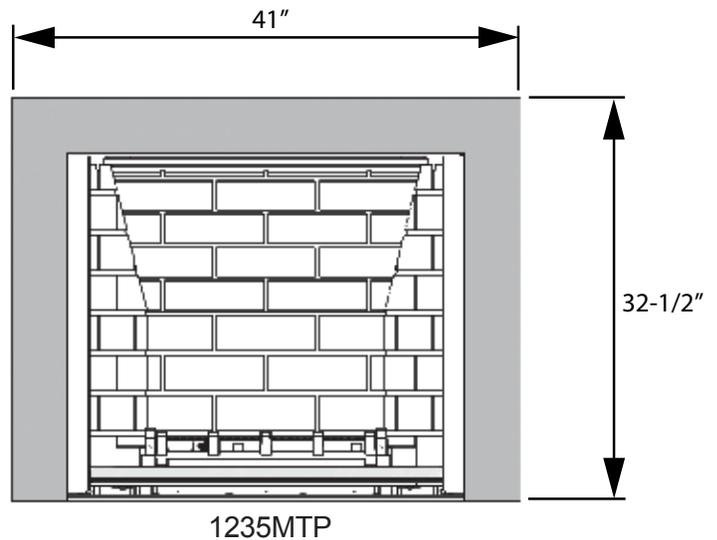
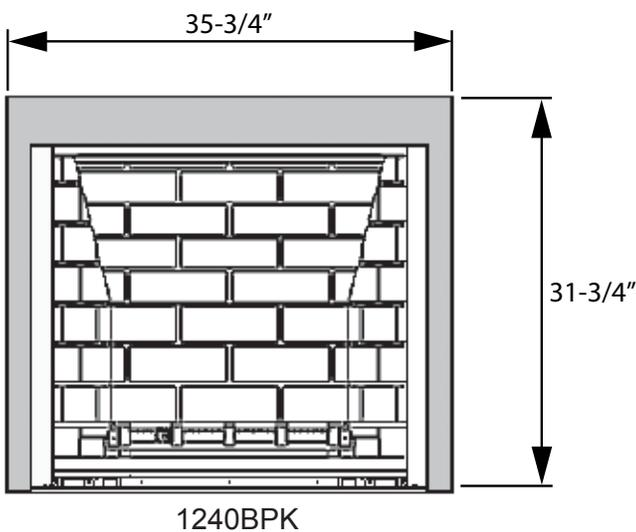


The 1240BPK and 1235MTP three-sided trims can be installed on the Valor Ventana 1200 engine once the wall finish is completed.

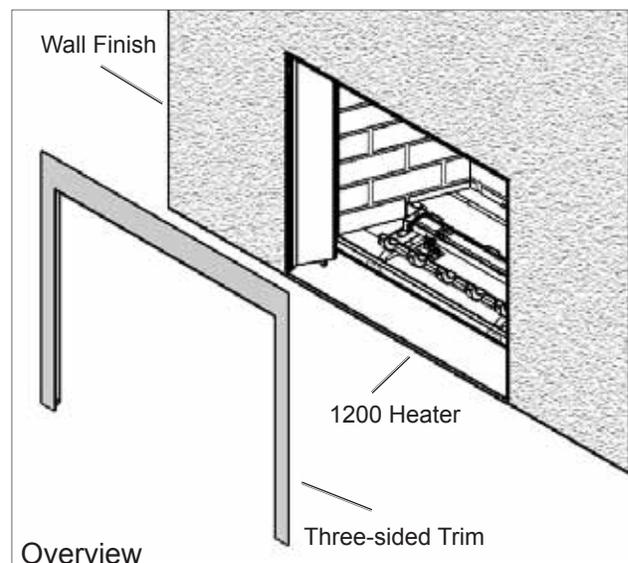



Installation

1. Remove the 6 screws retaining the thin black metal strips to the top and sides of the fireplace opening as well as the front bottom overlay as shown. Remove the strips and recycle them as they are not needed for this installation. Keep the overlay to reinstall later.
2. Slide the 3-sided trim on the fireplace and fix it with 2 screws at the top; refit the overlay and fix it with the trim with 2 screws at the bottom on each side as shown.

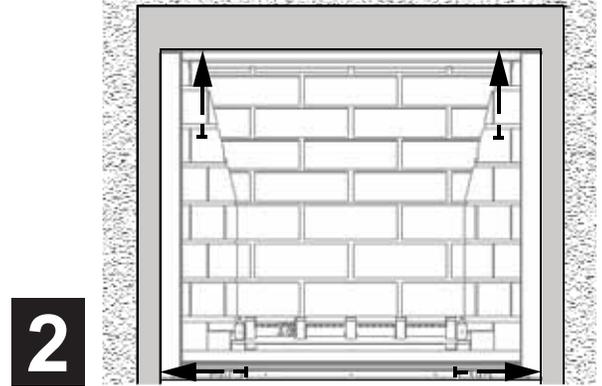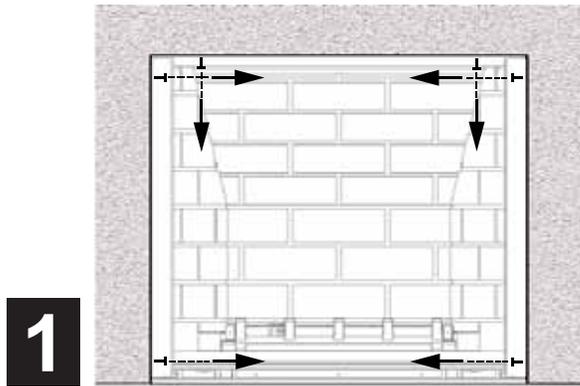

Repair Parts List

1	4001300AZ	2" Black Trim
2	4001640	4.5" Nickel-Plated Trim
	4001385	Hardware Kit (4 screws)

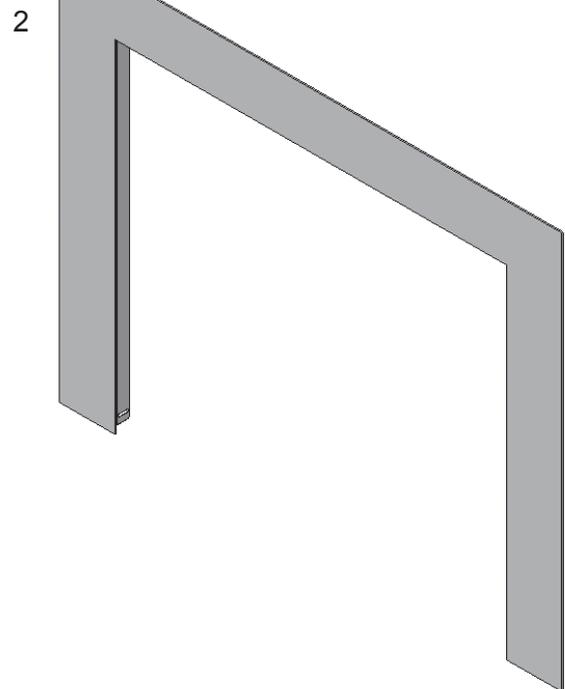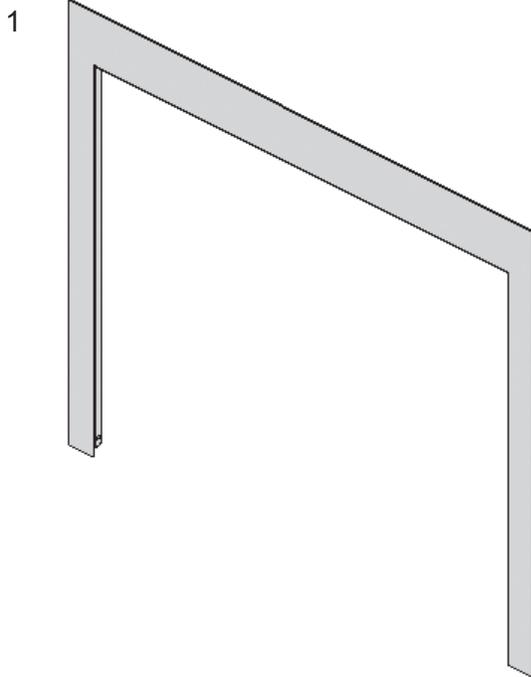

Designed and Manufactured by / Conçue et fabriquée par
Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver, BC, CANADA V7H 3B1

Tel. 604-984-3496 Fax 604-984-0246


www.valorfireplaces.com

Bordures à trois côtés Ventana DIRECTIVES D'INSTALLATION


Pour utilisation **exclusive** avec le foyer Valor 1200

Note: Les bordures doivent être installées par un installateur qualifié, une agence de service certifiée ou un fournisseur de gaz. Ces instructions doivent être utilisées conjointement avec les instructions d'installation du foyer 1200.

NOTE : Afin de permettre l'installation des bordures à trois côtés Ventana, la base du foyer doit être égale à la *surface* de la finition du plancher. Prenez note que les bordures ne peuvent être montées *que sur un mur incombustible d'une épaisseur maximale de 1/2 pouce (13 mm) par-dessus le panneau de béton fourni avec le foyer.*

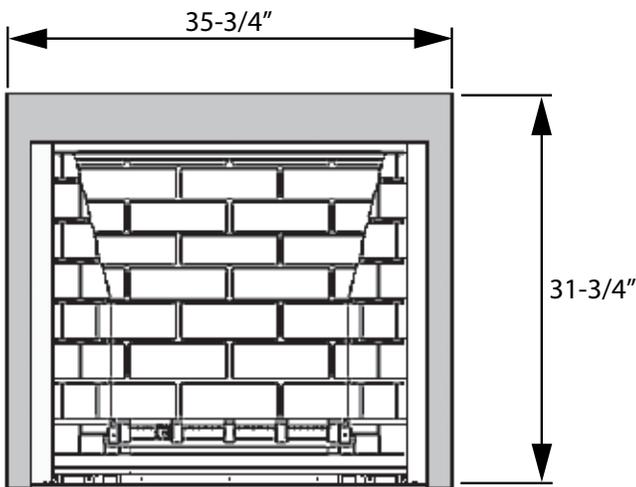


1240BPK

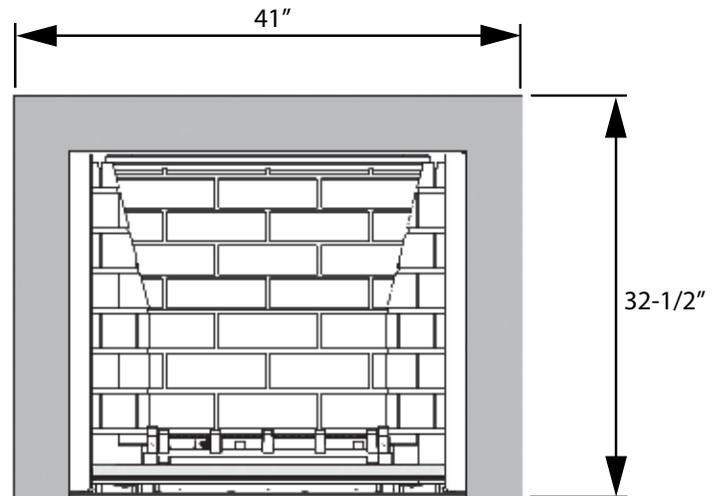



1235MTP

Les bordures à trois côtés 1240BPK et 1235MTP peuvent être installées sur le foyer Valor Ventana 1200 une fois la finition du mur terminée.

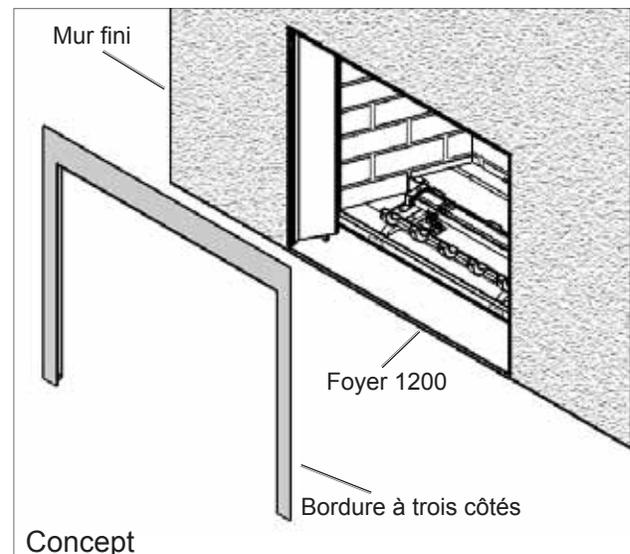



Installation

1. Dévissez les lisières de métal noires du haut et des côtés de l'ouverture de l'appareil de même que la plaque de seuil, tel qu'indiqué. Les lisières ne sont pas nécessaires pour l'installation et peuvent être recyclées. Conservez la plaque de seuil.
2. Glissez la bordure en position sur l'ouverture du foyer. Fixez-la à l'aide de 2 vis au haut. Réinstallez la plaque de seuil et fixez-la avec la bordure à l'aide de 2 vis au bas de chaque côté tel qu'indiqué ci-dessous.

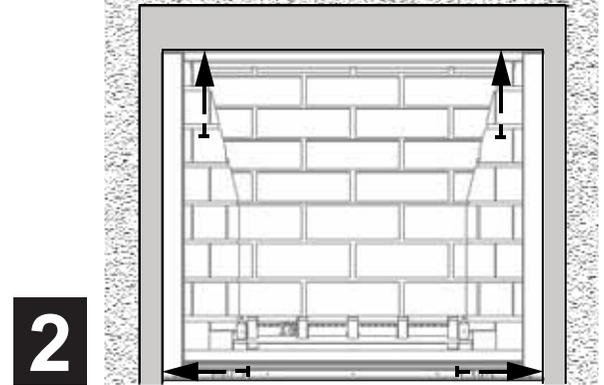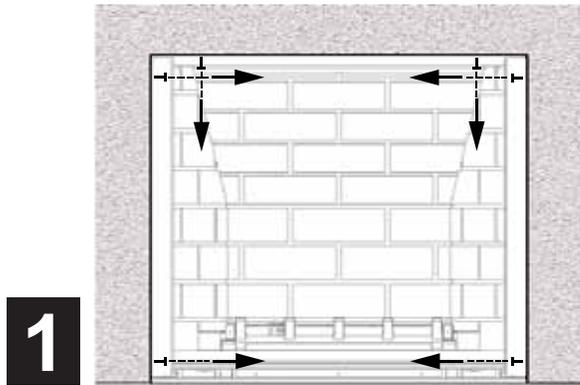

Liste de pièces

1	4001300AZ	Bordure de 2 po noire
2	4001640	Bordure de 4,5 po plaquée nickel
2	4001385	Quincaillerie (4 vis)

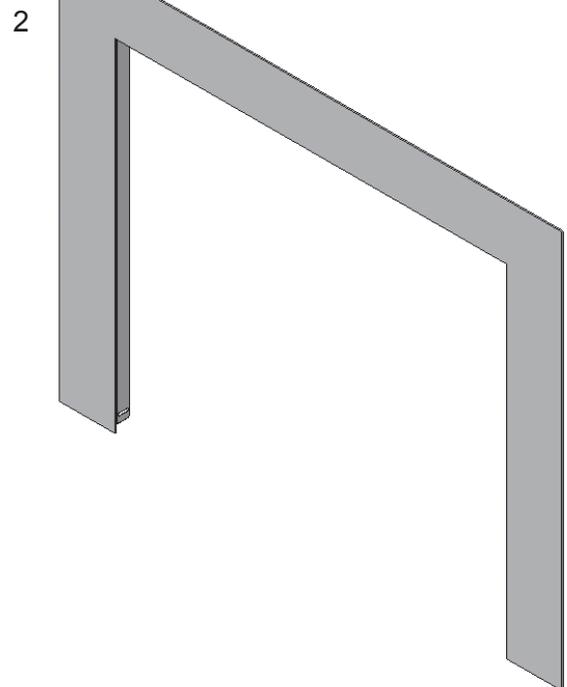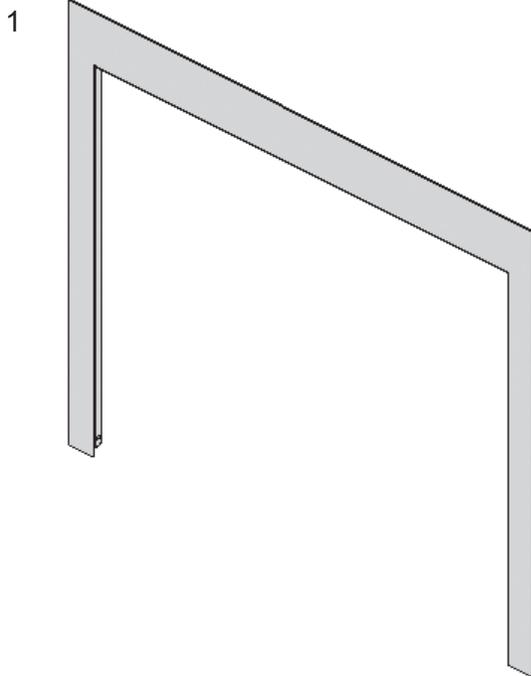

Conçue et fabriquée par / pour
Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver, C.-B., CANADA V7H 3B1

Tél. 604-984-3496 Téléc. 604-984-0246

www.foyervalor.com